

ONLINE VERSION

- **DE -** Du findest diese Anleitung in Deiner Sprache auch online: www.hauptstadtkoffer.de/de/downloads/britz-koffer
- **EN -** You will also find this manual in your language online: www.hauptstadtkoffer.de/en/downloads/alex-koffer
- FR Vous pouvez trouver en ligne les instructions dans votre langue: www.hauptstadtkoffer.de/fr/downloads/britz-koffer
 - **ES** Encontrará las instrucciones en su idioma también en línea: www.hauptstadtkoffer.de/es/downloads/britz-koffer
 - IT Puoi trovare on-line questo manuale nella tua lingua: www.hauptstadtkoffer.de/it/downloads/britz-koffer

VERZEICHNIS

About the Product		
Tips und Tricks	1	
TSA Combination Lock		
Telescopic Handle and Wheels	8	
For the Start of your Trip 1	(

Customer Service +49(0) 30.63 413 414 | Mon. - Fri.: 9.00 - 16.00 info@hauptstadtkoffer.de





HAUPTSTADTKOFFER®

www.hauptstadtkoffer.de

THANK YOU FOR CHOOSING A HAUPTSTADTKOFFER!

Congratulations: you have selected a top-class product that meets the highest quality standards.

ADVANTAGES OF A PP HARDSHELL

The matte surface of Polypropylene gives the trolley its noble finish.

Despite the extremely thin hard shell and the particularly low weight of the suitcase, the trolley is extremely impact-resistant, unbreakable and tough.



5 YEAR Guarantee

Five-year guarantee from the date of purchase, subject to guarantee conditions. More info at: hauptstadtkoffer.de/de/garantie



Especially lightweight for convenient transportation



Four 360° easy-running wheels



Easy-to-replace parts, attached by screws



TSA lock with selectable number combination



Practical laptop compartment (except 75 cm case)



Telescopic handle with a push-button to select the height level

TIPS AND TRICKS



Avoid surprises

More security. A bag belt¹ protects your luggage. *Reduce excess luggage.* With the mobile luggage scales,¹ you can avoid additional costs. *No more scratches.* A suitcase cover¹ protects your case during rough baggage transportation at the airport.

Organised packing



More organised. The cross-belt keeps your luggage together. The intermediate floor with two separate compartments helps you gain an overview when packing. Chaos in the suitcase. With an organiser set¹, you can keep your suitcase tidier. Too much luggage. A foldable travel bag¹ is the perfect solution for excess luggage.



Enjoy a pleasant travel experience Set off on your holiday relaxed. A neck pillow¹ protects against tension by allowing an anatomically-correct reclined position. Sleep peacefully. A sleep mask¹ gives you a darker environment and ensures a peaceful night's sleep.

$How \ to \ care \ for \ your \ HAUPTSTADTKOFFER \ correctly.$

Clean any dirt on the outer shell with a damp cotton cloth. Treat small scratches with polish and a cotton cloth. When storing, wrap the outer shell of the suitcase in a fabric or suitcase cover.

1 You can find useful travel accessories in the online shop: www.hauptstadtkoffer.de/de/zubehoer



2

ALL YOU NEED TO KNOW ABOUT YOUR TSA COMBINATION LOCK

Why do I need a TSA combination lock?

TSA locks are recommended for travel in the USA. The item of luggage can be opened and searched by airport security staff with a master key, without damaging the lock.



More info www.hauptstadtkoffer.de/de/kofferschlos

 




TSA COMBINATION CASE SERIES "BRITZ"

Depending on the case size, the "Britz" series has two different TSA combination locks.

TSA 13162 // Two-way closure for the hand luggage and the middle case (65 cm) with front flap





Where is the key for the TSA lock?

Only airport security personnel possess the master key for the TSA lock. For this reason, you do not require a key for your TSA lock – just a number combination. Suitcase manufacturers and retailers do not possess a TSA key.



Forgotten your number combination?


If you forget your number combination, you can open your suitcase in the following way: a 3-digit number lock has 999 different combinations. If you try out all possible combinations (beginning with 0-0-0), you will be able to open the lock in approx. 20-30 minutes.


If you have any problems/queries regarding your product, please contact our customer service



+49(0) 30.63 413 414 | info@hauptstadtkoffer.de

 TSA 16009 // Closure for the big case (75cm)



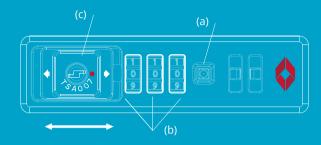


TSA 13162 The default combination is 0-0-0. To set your own combination, please follow these steps:

- 1. Set the wheels to the number combination 0-0-0.
- 2. Press the reset button down with the help of a stylus (or other tool) until you hear a clicking sound.
- 3. Turn the dial (b) to set a personal number combination (e.g. 8-8-8).
- 4. Slide the latch (c) towards the dial until you hear the click sound again. This causes the reset button (a) to pop up, which means that it is unlocked. Now you can slide the latch to the left or right to open both sides of the lock. Depending on the direction of the arrow, either the front flap or the zip unlocks.

This completes the setting. If you want to reset the combination again, repeat steps 1 - 4.

6

Please don't forget your personal number combination!

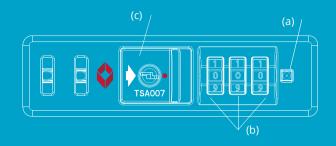

TSA 16009 The default combination is 0-0-0. To set your own combination, please follow these steps:

- 1. Set the wheels to the number combination 0-0-0.
- 2. Press the reset button down with the help of a stylus (or other tool) until you hear a clicking sound.
- 3. Turn the dial (b) to set a personal number combination (e.g. 8-8-8).
- Slide the latch (c) towards the dial until you hear the click sound again. This causes the reset button (a) to pop up, which means that it is unlocked.

This completes the setting. If you want to reset the combination again, repeat steps 1 - 4. Please don't forget your personal number combination!

Note: If the dial is set to the wrong combination, you cannot lock your luggage with the zips.

SUSTAINABLE FUNCTIONALITY



Your suitcase is made from components that are easily replaced and screw into place. Parts such as the telescopic handle/wheels are simple to replace.






CHANGING THE TELESCOPIC HANDLE

- 1. Open the zip of the interior lining in the suitcase (fig. 1).
- 2. Remove the protective film on the screws (fig. 2).
- 3. The screws (quantity: 6) can be loosened with a Phillips screwdriver (fig. 2).
- 4. Remove the defective telescopic handle above the suitcase (you may experience some resistance, so employ a little strength to remove it) and substitute this with a new handle.

If sensitive parts, such as the telescopic handle or wheels, stop functioning optimally after several years of use, please get in touch with our customer service team.

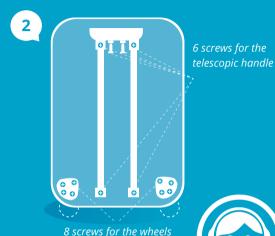

+49(0) 30.63 413 414 | info@hauptstadtkoffer.de

CHANGING THE WHEELS

- 1. Open the zip of the interior lining of the suitcase (fig. 1).
- 2. Remove the protective film from the screws (fig. 2).
- 3. The screws (quantity: 8) can be loosened with a Phillips screwdriver (fig. 2).
- 4. Remove the defective wheels and substitute with new wheels.



More info in the video: hauptstadtkoffer.de/koffer-videos

TO-DO LIST



1. Set the number combination



2. Pack the case



3. Check your packing list



4. Enjoy your holiday



5. Review your suitcase

YOUR EVALUATION IS IMPORTANT TO US



We would be delighted if you would share your experience with this product. Your evaluation helps other customers make a purchase decision and also provides us with valuable feedback.

If there is a problem with your delivery, please get in touch with our customer service team, so that we can resolve the problem as quickly as possible.

YOUR PACKING LIST



Clothing

- Underwear, pyjamas or night-shirt
- Swimwear
- Sports clothing
- Trainers
- Rain clothing or umbrella



Documents

- Passport
- Travel tickets
- Credit cards
- Driving licence or driving papers
- Emergency pass



Hygiene & Cosmetics

- Toothbrush and toothpaste
- Shampoo and shower gel
- Shaving equipment
- Make-up equipment, face creams etc.
- Contact lens solution and containers
- Medicines
- Sun cream



Electronics

- Adaptor plug for foreign sockets
- Camera and charging equipment
- Photography equipment, video camera
- Memory cards
- Hair dryer
- Travel alarm
- MP3 player
- Batteries
- Torch

X



HAUPTSTADTKOFFER® www.hauptstadtkoffer.de